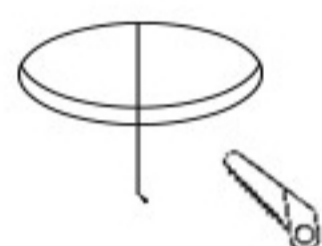
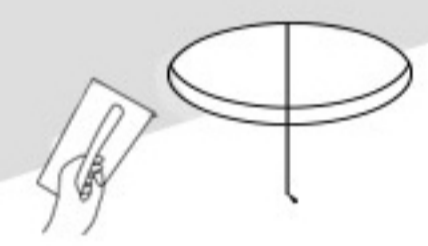


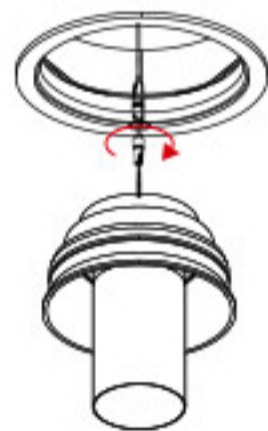

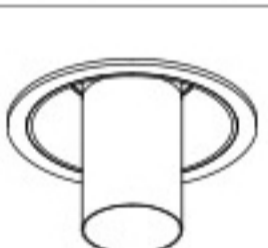
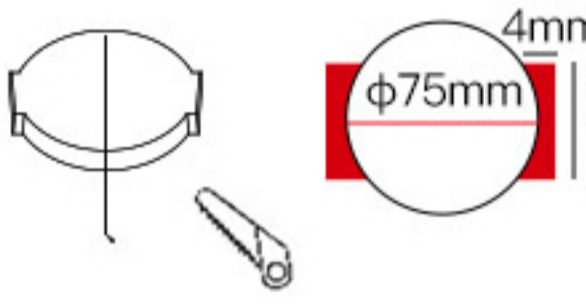
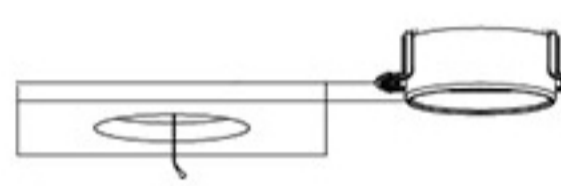

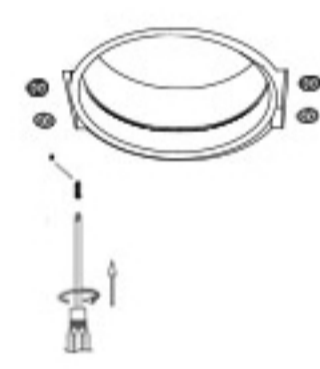







Installation Instructions

With Trim

 <p>1. Cutout on the ceiling cutout size: 75mm (2.95")</p>	 <p>2. Plaste-mesh-putty-paint finish the ceiling</p>	 <p>3. After the paint dry enough, install the embedded part</p>
 <p>4. Wire the driver</p>	 <p>5. Plug in the light</p>	 <p>6. Install the light</p>
 <p>7. Done</p>		

Trimless

 <p>1. Cutout on the ceiling cutout size: 75mm (2.95")</p>	 <p>2. Adjust the embedded part height, flush with the gypsum ceiling/drywall</p>	 <p>3. Install the embedded part</p>
 <p>4. Fix it with screws</p>	 <p>5. Plaster-mesh-putty-paint</p>	 <p>6. Wire the driver</p>
 <p>7. Plug in the light</p>	 <p>8. Click the light on</p>	 <p>9. Done</p>

Note:

1. The embedded part should be placed 1–3mm lower than the gypsum ceiling/drywall.
2. Clean the hole edges while the paint is still wet, for better fitting of the light module.



- To secure safety, a qualified electrician is required to install/remove the luminaire.
- **POWER OFF!!! NOT HOT PLUGGING!!!**