
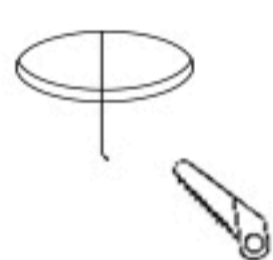



# NUORDIC

INTERIOR COMPANY

## Type 1: Protruded from the ceiling

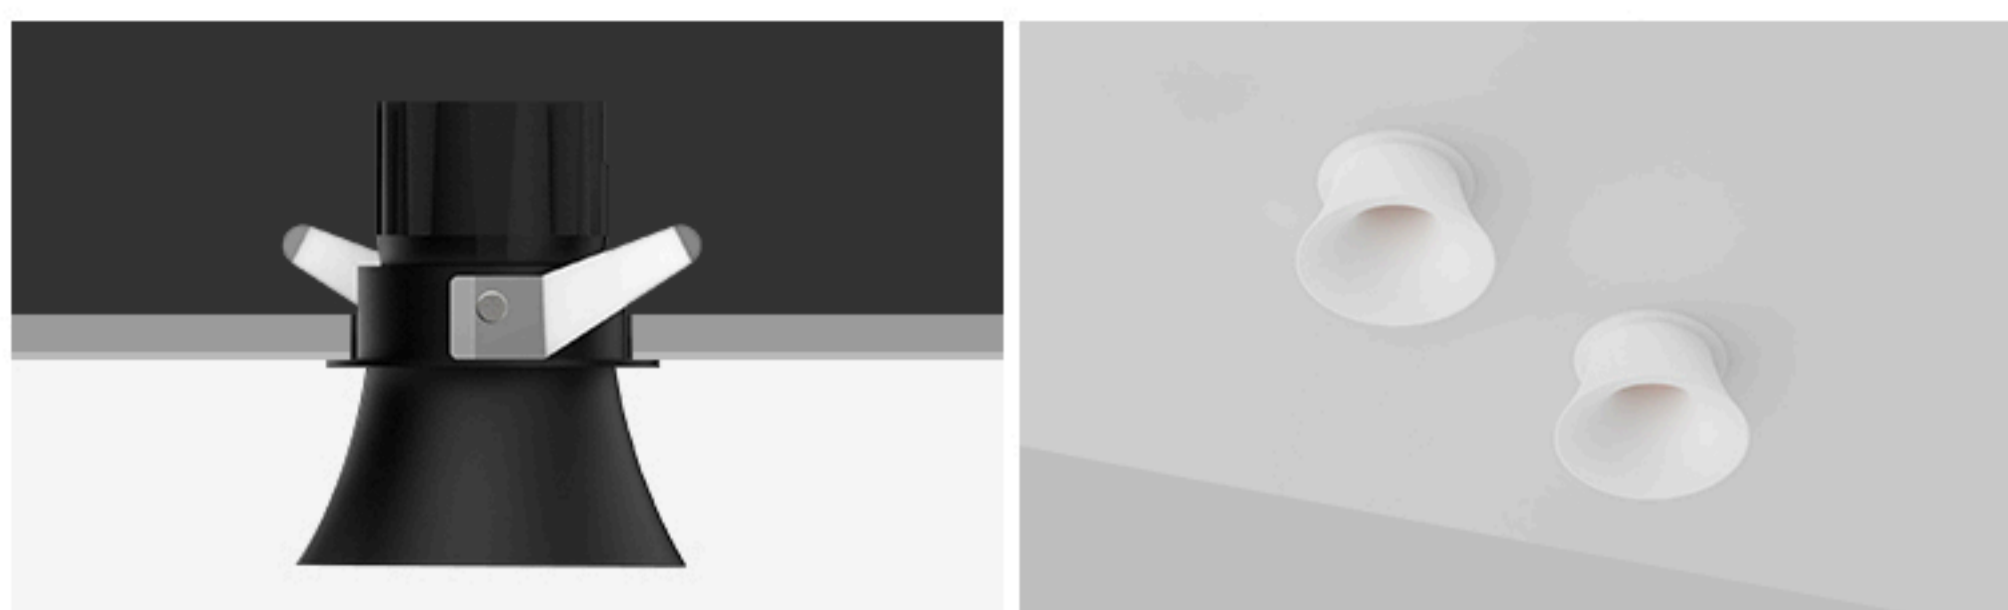


1. Cutout on the ceiling  
cutout size: **55mm (2.17")**

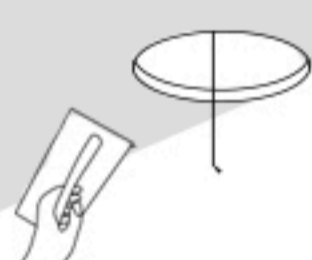

2. Plaste-mesh-putty-paint,  
finish the ceiling



3. Wire the driver

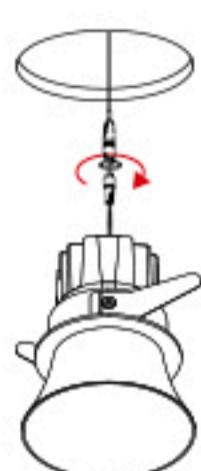

4. Plug in the light





5. Install the light




6. Done


## Type 2: Flushed with ceiling

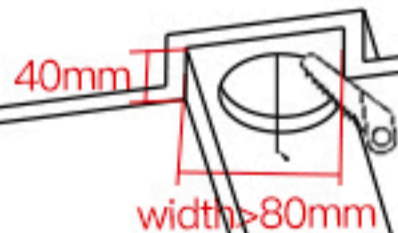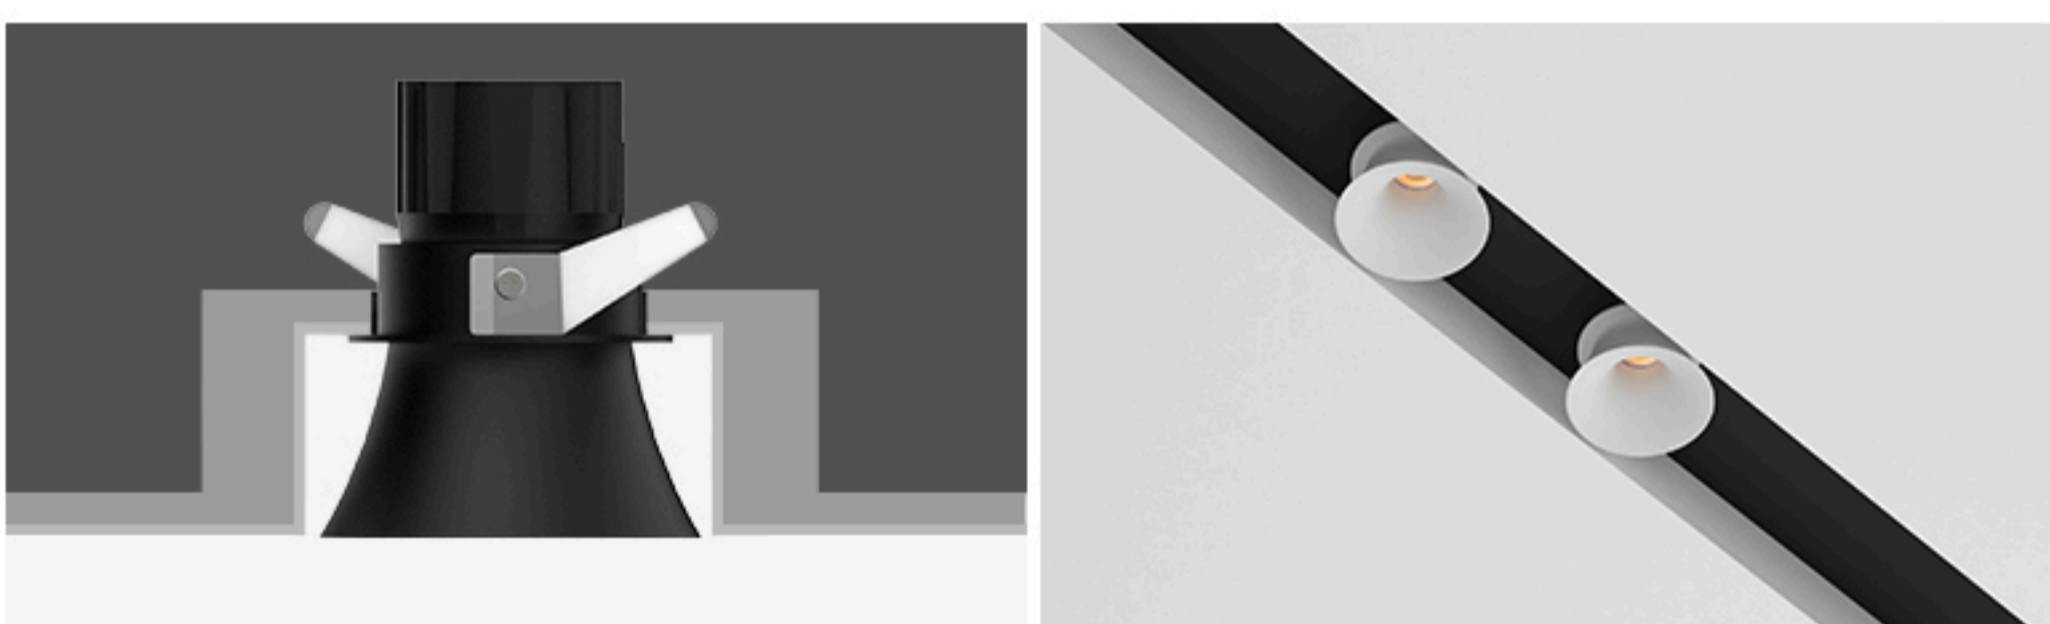


1. Build a channel  
(width > 80mm) on the ceiling,  
cutout on the ceiling  
cutout size: **55mm (2.17")**

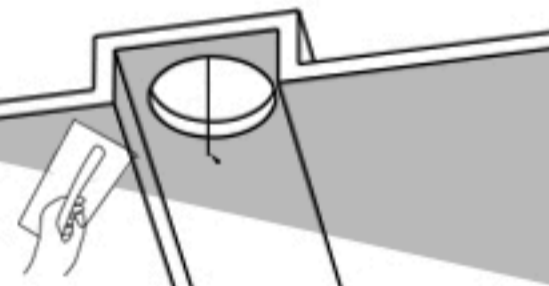

2. Plaste-mesh-putty-paint,  
finish the ceiling

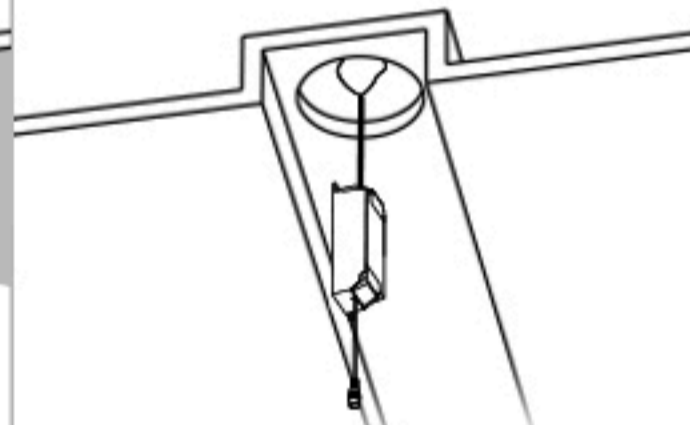


3. Wire the driver

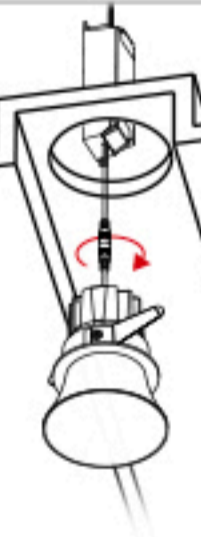

4. Plug in the light



5. Install the light

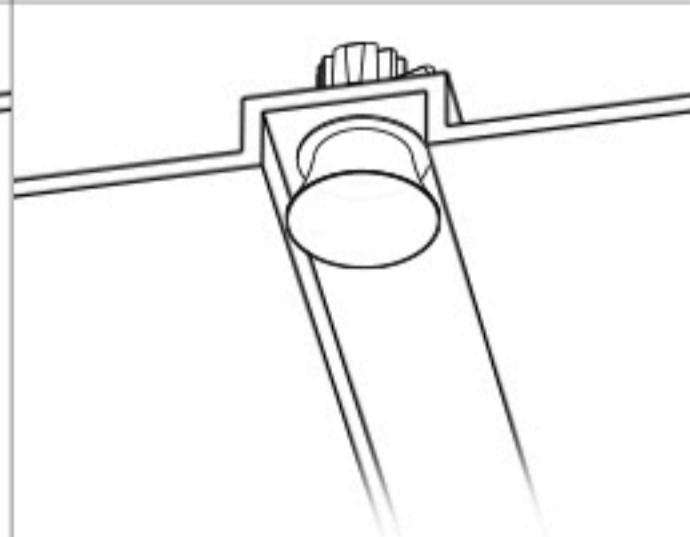

6. Done

### Note:

1. The embedded part should be placed 1–3mm lower than the gypsum ceiling/drywall.
2. Clean the hole edges while the paint is still wet, for better fitting of the light module.



- To secure safety, a qualified electrician is required to install/remove the luminaire.
- **POWER OFF!!! NOT HOT PLUGGING!!!**