

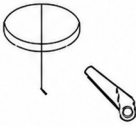
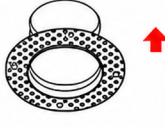
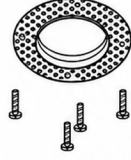
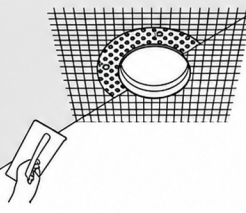









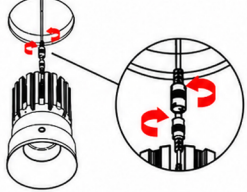

# Trimless Installation Instructions

 <p>1. Cutout on the ceiling cutout size: <b>62mm</b> (2.44")</p>	 <p>2. Install the embedded part</p>	 <p>3. Fix embedded parts with screws</p>
 <p>4. Plaster-mesh-putty-paint</p>	 <p>5. Wire the driver</p>	 <p>6. Plug in the light</p>
 <p>7. Click the light on</p>	 <p>8. Done</p>	

# Micro-Flange Installation Instructions

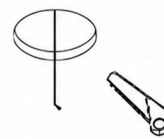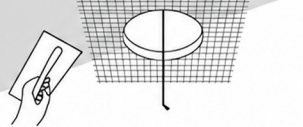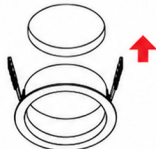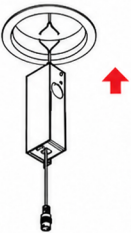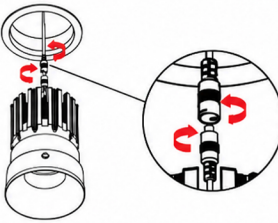 <p>1. Cutout on the ceiling cutout size: <b>62mm</b> (2.44")</p>	 <p>2. Plaste-mesh-putty-paint, finish the ceiling</p>	 <p>3. After the paint dry enough, install the embedded part</p>
 <p>4. Wire the driver</p>	 <p>5. Plug in the light</p>	 <p>6. Click the light on</p>
 <p>7. Done</p>		